SONY

4-227-953-14(1)

Remote Commander

Operating Instructions

RM-LP204
RM-LP204M

© 2000 by Sony Corporation

Downloaded from www.Manualslib.com manuals search engine

OWNER'S RECORD

For your convenience, record the model number and serial number (you will find them on the rear of your set) in the space provided below. Please refer to them when you contact your AIWA dealer in case of difficulty.

Model No.	TS-W42 U
Serial No.	

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

"CAUTION:TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL."

Explanation of Graphical Symbols:

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

TABLE OF CONTENTS

FEATURES 2
PRECAUTIONS 4
POSITIONING 6
CONNECTIONS 6
OPERATION 6
SPECIFICATIONS 8

FEATURES

- **VOLUME control**

- **Auto Power Function**
  The TS-W42 automatically turns on when receiving a signal input from the connected equipment.

- **Dynamic Bass System**
  TS-W42 adopts a Dynamic Bass System in which port (1), duct (1), and air cavity (2) compose an acoustic bandpass filter in front of air cavity (1). By virtue of this structure, the bass reproduction limit is extended and sounds higher than middle range frequencies are reduced in the Dynamic Bass System. This makes it possible for the TS-W42 to reproduce powerful bass sound.

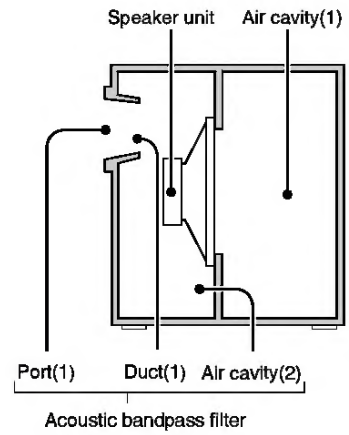

Downloaded from www.Manualslib.com manuals search engine

CE Declaration of Conformity

We,

Acer Computer (Shanghai) Limited
3F, No. 168 Xizang Medium Road, Huangpu District,
Shanghai, China

Contact person: Mr. Easy Lai

Tel: 886-2-8691-3089, Fax: 886-2-8691-3120

Email: easy_lai@acer.com.tw

Hereby declare that:

Product: Notebook Computer	Trade name: Acer
Model number: MS223S	Machine type: Aspire S730Z/5330

SKU number: Aspire S730Z/5330-xxxxx ("x" = 0-9, a - z, or A - Z)

Is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue comply with the requirements.

EMC Directive 2004/108/EC as attested by conformity with the following harmonized standards:

-.ENSS022:1998 + A1:2000 + A2:2003, AS/NZS CISPR22:2002, Class B
-.ENSS024:1998 + A1:2001 + A2:2003
-.ENSS013:2001 + A1:2003 + A2:2006 (For AV products)
-.ENSS020:2007 (For AV products)
-.EN61000-3-2:2006, Class D
-.EN61000-3-3:199S + A1:2001 + A2:200S

Low Voltage Directive 2006/9S/EC as attested by conformity with the following harmonized standard:

-.EN609S0-1:2001 + A11:2004
-.EN6006S:2002 (For AV products)

Council Decision 98/482/EC (CTR21) for pan-European single terminal connection to the Public Switched Telephone Network (PSTN).

RoHS Directive 2002/9S/EC on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment.

R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standards:

- Article 3.1(a) Health and Safety
  -.EN609S0-1:2001 + A11:2004
  -.ENS0371:2002 (SAR, general RF devices)
  -.ENS0360:2001 (SAR, for mobile phones)
- Article 3.1(b) EMC
  -.EN301 489-1 V1.6.1 (Common technical requirements)
  -.EN301 489-3 V1.4.1 (For short-range devices)
  -.EN301 489-7 V1.3.1 (For GSM and DCS)
  -.EN301 489-17 V1.2.1 (For wide band data and HIPERLAN equipment)
  -.EN301 489-24 V1.2.1 (For UMTS band)
- Article 3.2 Spectrum Usages
  -.EN300 220-3 V1.1.1 (For short range devices, 2S - 1000MHz, part 3)
  -.EN300 440-2 V1.1.2 (For short range devices, 1G - 20GHz, part 2)
  -.EN300 328 V1.7.1

Downloaded from www.Manualslib.com manuals search engine

- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- The height adjustable screw feet must never be removed.
- The plug must be accessible after installing the machine
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the appliance with jets of water. Risk of electric shock!
- Do not lean on the open door. The appliance may tip over.
- Once the drying cycle or ProSteam programme has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.
- Take care when interrupting the ProSteam programme: Do not open the machine door during the steam phase. Hot steam may result in burns. The display shows a message to indicate the steam phase.
- The final part of a drying cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- ⚠ Caution – Hot surface:

  Do not touch the back of the appliance while it is operating.

⚠ **WARNING!**
Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Risk of fire!

- **Risk of electric shock!** Do not spray down the appliance with jets of water.

Installation

- Note the "Installation" instructions.
- **Important!** Appliance must be moved in vertical position for transport.
- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

Use

- The appliance is intended for drying and steam treatment of standard laundry in domestic applications.
- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.

Downloaded from www.Manualslib.com manuals search engine

GETTING TO KNOW YOUR APPLIANCE

THE CONTROL PANEL

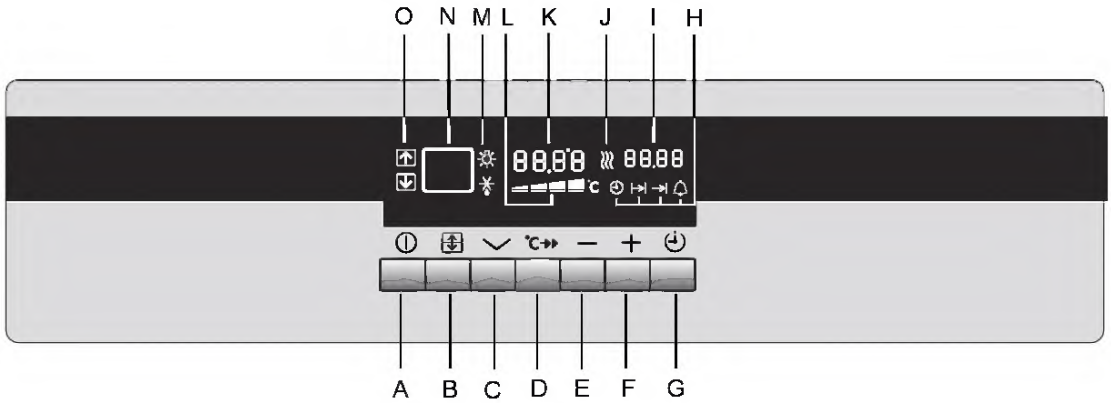

A - On/Off Switch

B - Second Oven and Main Oven Cavity Selector

C - Function Selector

D - Speedcook

E - Time/Temperature Decrease Selector

F - Time/Temperature Increase Selector

G - Timer Selector Control

H - Timer Indicators

I - Operating Time

J - Keep Warm Indicator

K - Temperature/Time

L - Heat Indicator

M - Light/Defrost Indicators

N - Oven Function

O - Cavity Indicator

Oven Light

Main Oven Full Width Dual Grill

Main Oven Single Economy Grill

Ventitherm ® Precision Fan Cooking

Hot Air Fan Baking

Conventional Cooking

Rotitherm Roasting

Pizza

Fan Controlled Defrosting

Keep Warm

Downloaded from www.Manualslib.com manuals search engine

Chapter 4: Service Information

Theory of Operation 25
Z-80A System Operation 26
Select Code Recognition 26
Interrupt System 27
Interface Reset 27
Shared Memory Controller 28
Addressing 28
Read/Write Control 28
Clock Circuits 28
Memory Access Select Timing 29
Memory Cycle Timing 29
Hardware Registers 31
Shared RAM 32
Default Switches 33
Baud Rate Multiplexer 33
Line Drivers and Receivers 33
Replacement Parts 34

Industry Canada statement:

English

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Caution:

(i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

(ii) high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

(i) les dispositifs fonctionnant dans la bande 5 150-5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

(ii) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5 250-5 350 MHz et 5 650-5 850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Downloaded from www.Manualslib.com manuals search engine

SAFETY INSTRUCTIONS

General safety instructions

IMPORTANT INFORMATION

- **The machine is only designed for trimming grass.**
- **The only accessories to be used with the engine unit as a drive source are the cutting units we recommend in the chapter *"Technical data"*.**
- **Never use the machine if you are tired, if you have consumed alcohol, or if you are taking medicines that can affect your sight, your judgement or the control of your body.**
- **Use personal protective equipment. See the section *"Personal protective equipment"*.**
- **Never use a machine that has been modified so that it no longer corresponds with the original design.**
- **Never use a machine that is faulty. Follow the maintenance, control and service instructions in this Operator's Manual. Some maintenance and service actions should be carried out by trained and qualified specialists. See the chapter *"Maintenance"*.**
- **All covers and guards must be fitted before starting the machine. Check that the spark plug cap and HT lead are not damaged, otherwise you could get an electric shock.**
- **The machine operator shall ensure, while working, that no persons or animals come closer than 15 metres (50 feet). When several operators are working in the same area the safety distance should be at least double tree length, however, at least 15 metres (50 feet).**

WARNING!
Faulty cutting equipment increases the risk of accidents.

Start

WARNING!
When the engine is started with the choke in either the choke or start throttle positions the cutting equipment starts to rotate immediately.

- The complete clutch cover with shaft must he fitted before the machine is started, otherwise the clutch can become loose and cause personal injury.
- Never start the machine indoors. Bear in mind the dangers of inhaling the engine's exhaust fumes.
- Observe your surroundings and make sure that there is no risk of people or animals coming into contact with the cutting equipment.
- Place the machine on the ground, ensure the cutting equipment runs free of twigs and stones. Push the machine hody towards the ground using your left hand. (NOTE! Not with your foot). Grip the starter handle with your right hand and pull the startercord.

Fuel safety

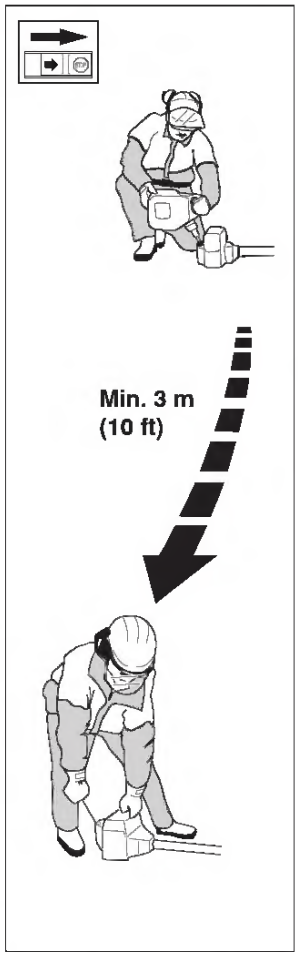

- Always use a fuel container with an anti-spill valve.
- Never fill the machine while tbe engine is running. Always stop the engine and let it cool for a few minutes before refuelling.
- Provide good ventilation when filling or mixing fuel (petrol and 2-stroke oil).
- Move tbe macbine at least 3 m from the filling position hefore starting.
- Never start the machine:

a) If you have spilt fuel on it. Wipe up all spillage.

b) If you have spilt fuel on yourself or your clothes. Change your clothes.

c) If there is a fuel leak. Make regular checks for leakage from the fuel cap and the fuel supply pipes.

Transport and storage

- Store and transport the machine and fuel so that any leakage or fumes do not risk coming into contact with sparks or naked flames. For example, electric machines, electric motors, electrical switches/power switches, heaters or the like.
- When storing and transporting fuel approved containers intended for this purpose must be used.
- When storing the machine for long periods the fuel tank must he emptied. Contact your local petrol station to find out how to dispose of excess fuel.

WARNING!
Exercise great care when handling fuel. Bear in mind the risk of fire, explosions and inhaling fumes.

Downloaded from www.Manualslib.com manuals search engine

Base view

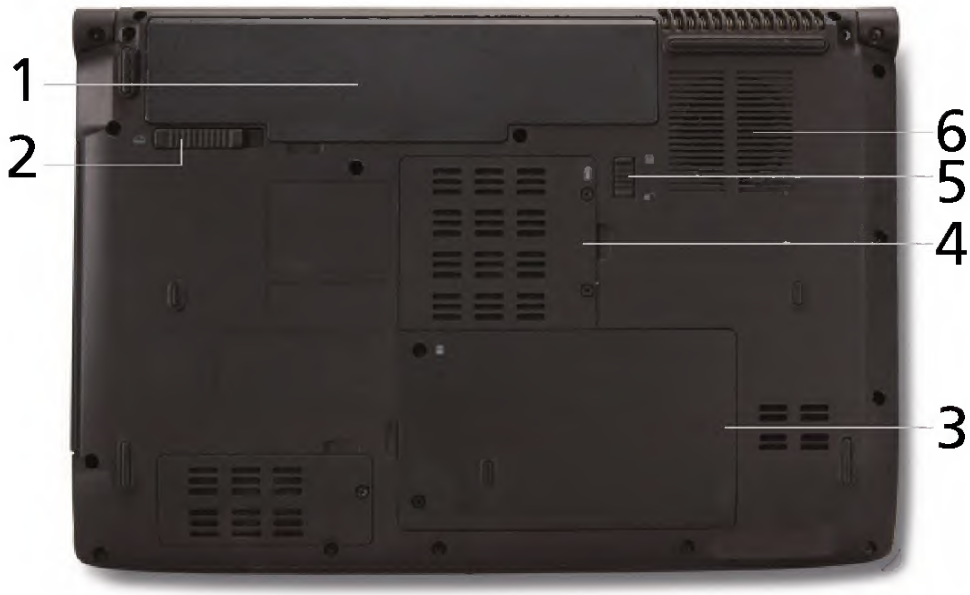

#	Icon	Item	Description
1		Battery bay	Houses the computer's battery pack.
2		Battery release latch	Releases the battery for removal.
3		Hard disk bay	Houses the computer's hard disk (secured with screws).
4		Memory compartment	Houses the computer's main memory.
5		Battery lock	Locks the battery in position.
6		Ventilation slots and cooling fan	Enable the computer to stay cool, even after prolonged use. **Note**: Do not cover or obstruct the opening of the fan.

Downloaded from www.Manualslib.com manuals search engine

5 MOUNTING

■ Mounting MY-CU and MYH-CU

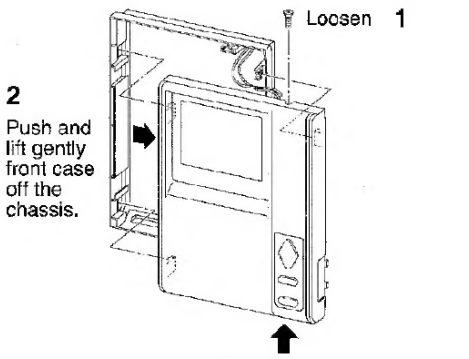

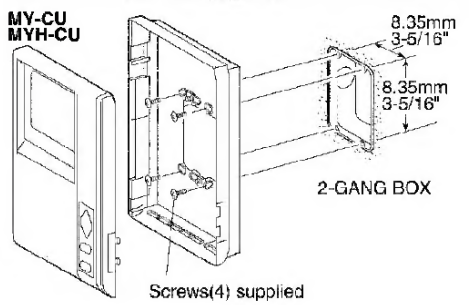

To mount the MY(H)-CU monitor, separate the terminals-mounted chassis from front case.

1. Loosen a screw on top of front case. Press on bottom, right hand, and the front case slightly moves up.
2. Then, press on center of left side, which unlocks from chassis.
3. Lift gently front case, then it separates.
4. Disconnect video-monitor. Pull off the holder and set monitor aside.
5. Attach chassis to wall at 4 points.
6. Make wire terminations directly on 6 screw terminals.
7. On MY-CU only, wire with jumpers on audio terminals D1, D2 & E.
8. Pin the holder, reconnect and mount front case, justly aligning to lock.

★ Do not connect any wires at any other point than on terminals.

■ Mounting with intercom

- **For IE-1GD(U), IE-2AD(U) or TD-H/A or B**

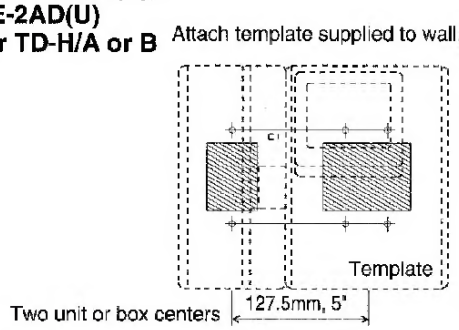

- **For IE-8MD and IE-8HD**

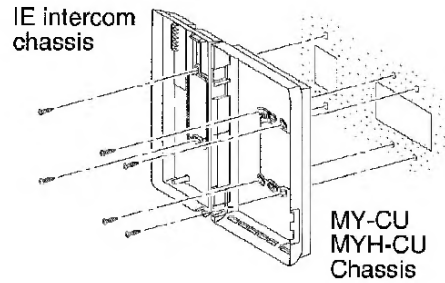

Before actually mounting the unit, attach the supplied template to wall. For MY-CU/IE-8MD combination, attach two chassis to wall. First, mount the intercom chassis (or bracket) to wall or single-gang box, and MY-monitor chassis can adjustably be mounted to its right side.

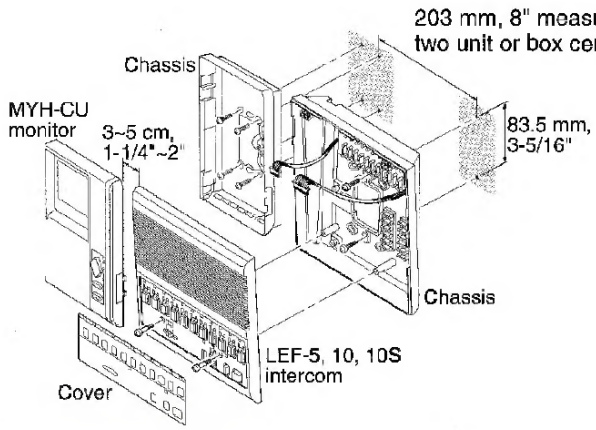

- **For MYH-CU and LEF-5, 10, 10S**

Mount MYH-CU to the left of LEF-5, 10, 10S intercom, keeping a space of 3 ~ 5 cm (1-1/4" ~ 2") for brightness/ contrast adjustment.

Downloaded from www.Manualslib.com manuals search engine

Warranty

English

Aiphone warrants thats its products bave no material or workmanship defects under normal use conditions for two years after delivery to the end user Aiphone will perform repair or replacement free of charge if the product is defective and the warranty applies to the defect. Aiphone reserves unto itself the sole right to make the final decision whether there is a defect in materials and/or workmanship and whether or not the product is under warranty This warranty shall not apply to any Aiphone product which has been subject to misuse, neglect, accident, or to use in violation of instructions furnished, nor extended to units which bave been repaired or altered outside of the factory This warranty does not cover batteries or damage caused by batteries used in connection with the unit This warranty only includes carry-in repairs. Any repairs must be made at the shop or place designated in writing by Aiphone Aiphone will not be responsible for any costs incurred during on-site service calls Aiphone will not provide compensation for any loss or damage incurred hy the breakdown or malfunction of its products during use, or for any consequent inconvenience or losses that may result

---

The object area of ⊠ is the EU.

Garantie

Français

Aiphone garantit que ce produit ne présente pas de défaut matériel ou de fabrication dans des conditions normales d'utilisation pendant les deux années suivant la livraison à l'utilisateur final Aiphone en effectuera gratuitement la réparation ou le remplacement si le produit est défectueux et que la garantie s'applique pour le défaut. Aiphone se réserve le droit exclusif de décider s'il existe ou non un défaut de matière ou de fabrication et si l'appareil est ou non couvert par la garantie Cette garantie ne s'applique pas à tout produit Aiphone qui a été l'ohjet d'une utilisation impropre, de négligence, d'un accident ou qui a été utilisé en dépit des instructions fournies, elle ne couvre pas non plus les appareils qui ont été réparés ou modifiés en dehors de l'usine Cette garantie ne couvre pas les piles ni les dégâts infligés par les piles utilisées dans l'appareil Cette garantie comprend uniquement les réparations en atelier Toutes les réparations doivent être réalisées à l'atelier ou au site désigné par écrit par Aiphone Aiphone décline toute responsabilité en cas de frais encourus pour les dépannages à domicile Aiphone n'indemnisera pas le client en cas de pertes, de dommages ou de désagréments causés par une panne ou un dysfonctionnement d'un de ses produits.

La zone d'application de ⊠ est l'UE.

Garantia

Español

Aiphone garantiza que sus productos no tienen defectos de material ni de mano de ohra hajo condiciones de uso normal durante dos años tras su entrega al usuario final Aiphone realizará la reparación o cambio libre de costo si el producto está defectuoso y la garantía se aplica al defecto AIPHONE se reserva el derecho de tomar la decisión final de si hay o no defectos de material y/o de mano de obra, y de si el producto está o no cubierto por la garantía. Esta garantía no cubre ningún producto AIPHONE que haya sido mal utilizado, descuidado, accidentado, o empleado violando las instrucciones suministradas; la garantía tampoco se aplica a unidades que bayan sido reparadas o alteradas por personas fuera de la fábrica Esta garantía no cubre las pilas ni los daños causados por pilas utilizadas asociadas a la unidad Esta garantía sólo incluye reparaciones acarreadas por el cliente Todas las reparaciones deben realizarse en el taller o lugar que Aiphone designe por escrito Aiphone no se responsabilizará de los gastos generados durante llamadas de servicio Aiphone no indemnizará por ninguna pérdida o daño en que se incurra debido a la avería o falla de sus productos durante su uso, ni por ningún inconveniente o pérdida que se produzca como consecuencia

---

El área del objeto ⊠ es la EU.

Garantie

Nederlands

Aiphone garandeert dat zijn producten onder normale gebruiksomstandigheden gedurende twee jaar na levering aan de eindgebruiker vrij zijn van materiaal- of fabricagefouten Aiphone zal het product kosteloos herstellen of vervangen als het defect is en de garantie van toepassing is op het defect Aiphone behoudt zich het recht voor om als enige definitief te bepalen of er al dan niet sprake is van een materiaal- en/of fabricagefout, en of het product nog onder garantie is Deze garantie geldt niet voor een Aiphone-product dat is hlootgesteld aan verkeerd gebruik, verwaarlozing, een ongeval of verkeerde bediening en evenmin voor toestellen die buiten de fabriek zijn hersteld of gewijzigd. Deze garantie geldt niet voor batterijen of schade veroorzaakt door batterijen die in het toestel zijn gebruikt. Deze garantie geldt uitsluitend voor berstellingen die worden ingeleverd en opgehaald door de klant. Alle herstellingen moeten worden uitgevoerd in de winkel of op de plaats die schriftelijk is aangeduid door Aiphone Kosten die gepaard gaan met herstellingen ter plaatse kunnen niet worden verhaald op Aiphone Er kan geen schadeloosstelling van Aiphone worden geeist voor enig verlies of scbade als gevolg van een defect of storing tijdens het gebruik van zijn producten, of voor enig ongemak of verlies dat hieruit voortvloeit.

Het toepassingsgebied van ⊠ is de EU.

Garanzia

Italiano

La Aiphone garantisce che i suoi prodotti saranno privi di difetti nei materiali o nella lavorazione, in condizioni di utilizzo normali, per un periodo di due anni dalla consegna all'utente finale. La Aiphone eseguirà la riparazione o la sostituzione gratuita del prodotto qualora tale prodotto debha risultare difettoso e la garanzia sia applicabile al difetto rilevato La Aiphone si riserva il diritto esclusivo di stabilire in via definitiva se sono presenti difetti nei materiali e/o nella lavorazione e se il prodotto è coperto dalla garanzia oppure no La presente garanzia non è applicahile ad alcun prodotto Aiphone che sia stato sottoposto ad uso improprio, negligenza, incidente, o che sia stato utilizzato in violazione alle istruzioni fornite, né può essere estesa alle unità che sono state riparate o manomesse al di fuori della fabhrica Questa garanzia non copre le hatterie né i danni causati dalle hatterie usate in connessione con l'unità Questa garanzia copre solo le riparazioni del prodotto consegnato presso il punto designato Le eventuali riparazioni devono essere eseguite presso l'officina o il luogo designato per iscritto dalla Aiphone. La Aiphone non potrà essere ritenuta responsahile di eventuali costi sostenuti in caso di chiamata per l'assistenza sul posto La Aiphone non offrirà alcun compenso per gli eventuali danni o perdite suhiti a causa della rottura o del guasto dei suoi prodotti durante l'uso, o per qualsiasi disagio o perdita conseguente che si dovesse verificare

---

L'area oggetto del ⊠ è l'UE.

Downloaded from www.Manualslib.com manuals search engine

Otherwise, click **Next**. Files are automatically copied, then the *Setup Complete* screen appears.

12. Remove the Mouse Suite software CD from the driver.

13. Select **Restart my computer now** and **Finish** to activate the mouse settings.

Downloaded from www.Manualslib.com manuals search engine

YAHTZEE BLOCK DIAGRAM

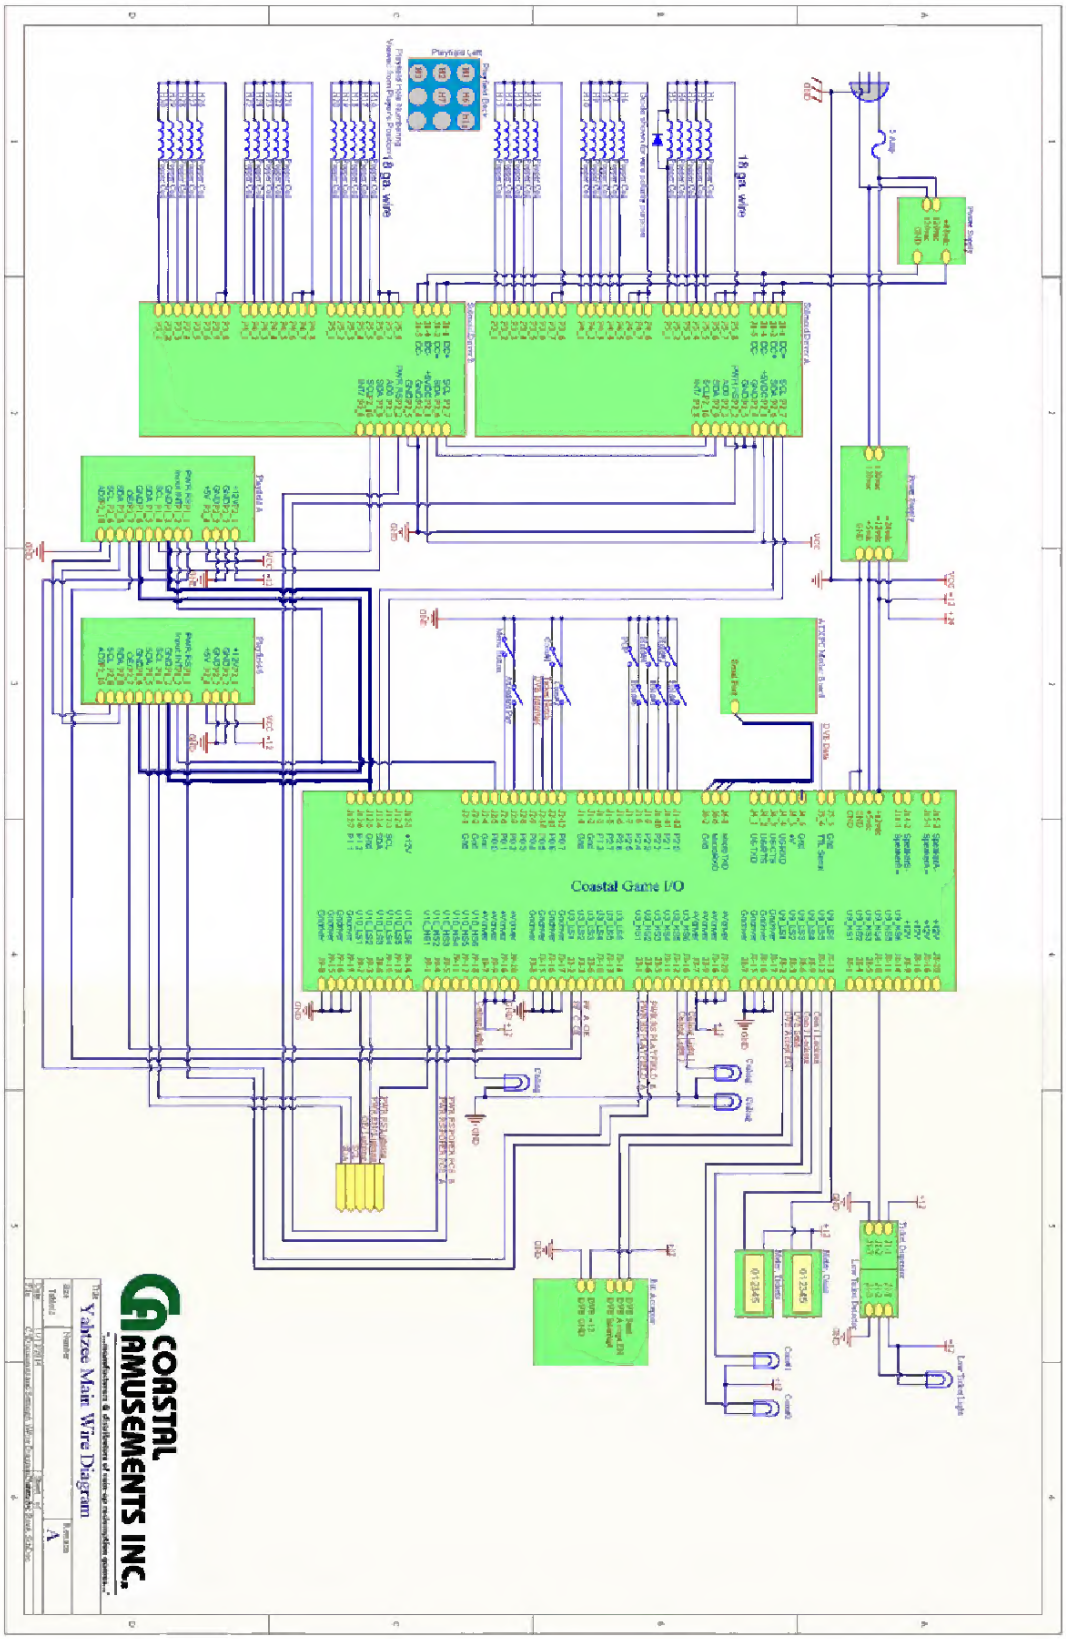

Downloaded from www.Manualslib.com manuals search engine

S13	Reserved		
S14	Echo, response, dialing, originate/answer	Bit-mapped	
S15	Reserved		
S16	Modem test options	Bit-mapped	
S17	Reserved		
S18	Modem test timer	0-255/seconds	0
S19	Reserved		
S20	Reserved		
S21	Auto retrain, RTS/CTS, DTR, DCD, DSR	Bit-mapped	
S22	Speaker and response	Bit-mapped	
S23	RDL, DTE data rate, parity, and guard tone	Bit-mapped	
S24	Reserved		
S25	DTR delay	0-100/seconds	5
S26	RTS/CTS delay interval	0-255/0.01 second	1
S27	Async operation, Line type	Bit-mapped	
S36	Negotiation Fallback	0-7	7
S37	Maximum line speed	0-11	0
S38	Forced hangup delay	0-255	20
S46	Select data compression	136, 138	138
S48	Feature negotiation	0, 7, 128	7
S49	Buffer lower limit	0-255	10
S50	Buffer upper limit	0-255	200
S63	Leased Line carrier level	0-15	0
S82	Break Signaling	3, 7, 128	128
S86	Connection failure code	0, 4, 9,10, 12-14	
S98	Speakerphone squelch timer	0-255/.001second	10

Section Five - Result Codes

BASIC RESPONSE CODES

OK	0	CONNECT	1
RING	2	NO CARRIER	3
ERROR	4	CONNECT 1200	5
NO DIALTONE	6	BUSY	7
NO ANSWER	8	CONNECT 2400	10
CONNECT 4800	11	CONNECT 7200	24
CONNECT 9600	12	CONNECT 12000	25
CONNECT 14400	13	CONNECT 19200	14
CONNECT 38400	28	CONNECT 57600	29
CONNECT 1200/75	22	CONNECT 75/1200	23

EXTENDED RESPONSE CODES

Downloaded from www.Manualslib.com manuals search engine

Loading cutlery

Warning: Sharp knives and other items of cutlery with sharp edges must be laid in the cutlery rack or in the upper basket to avoid the risk of injury.

To ensure that all items of cutlery in the cutlery basket can be reached by the water, you should:

1. Place the grid insert on the cutlery basket

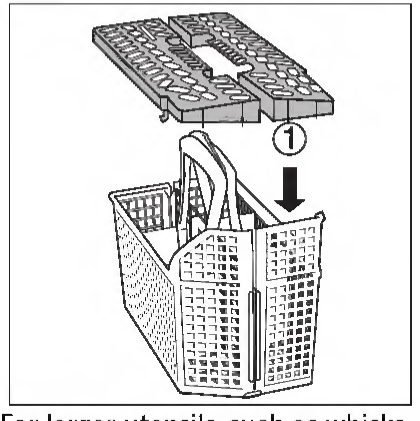

2. Place forks and spoons in the cutlery basket's grid insert with their handles pointing downwards.

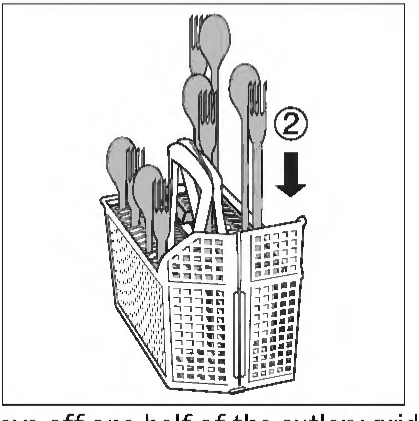

For larger utensils, such as whisks, leave off one half of the cutlery grid.

The cutlery basket can be opened out.

Always make sure that you put your hand around both parts of the two-part handle when removing it from the dishwasher.

1. Place the cutlery basket on a table or work surface.
2. Open out the two-part handle.
3. Remove cutlery.